




Please follow these steps to upgrade your ZX Diag Cart v2.15.

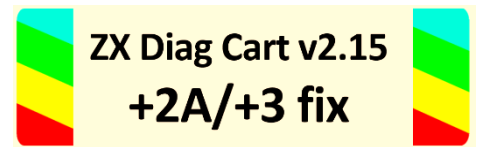


1. Remove Q7.

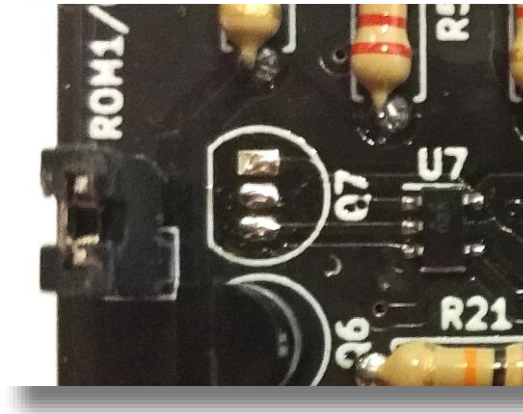

2. Solder the new transistor **upside down** to Q1 - you can solder both joints from the sides. We marked the **top** of BSS84 with silver paint, so you should **not** see that.

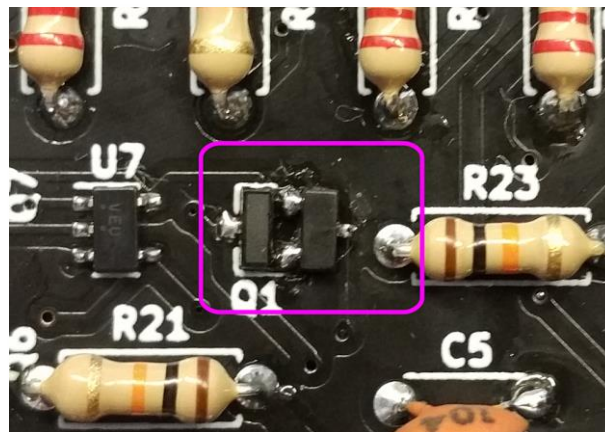

3. Add a wire from the third pin of the new transistor, to the lowest pad of Q7.

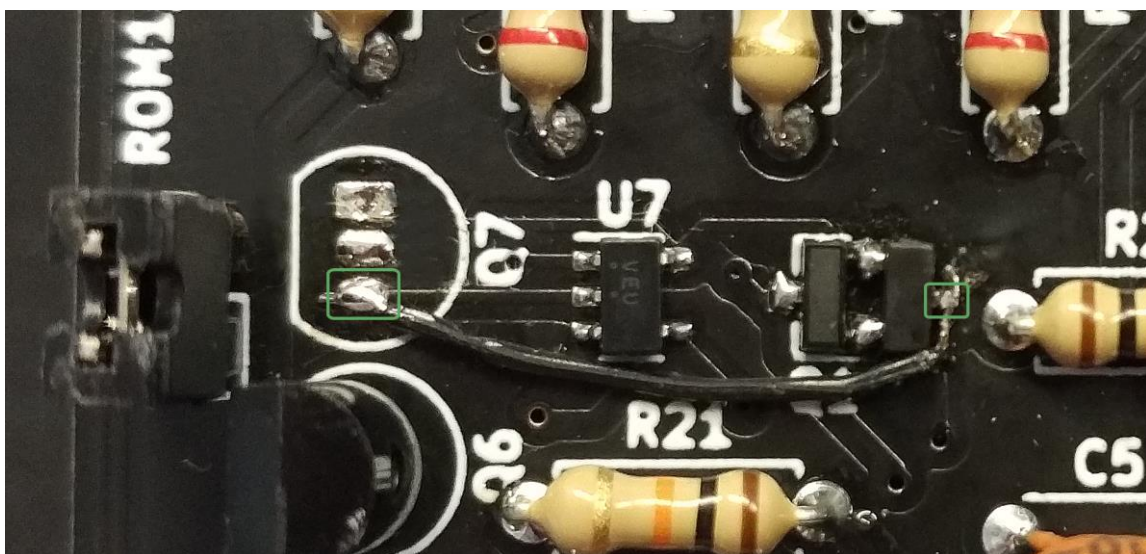

That's it!